


# ANNUNCIATOR MODEL 561A

 **Super Nurse Call**  
www.supernursecall.com  
888-568-0008

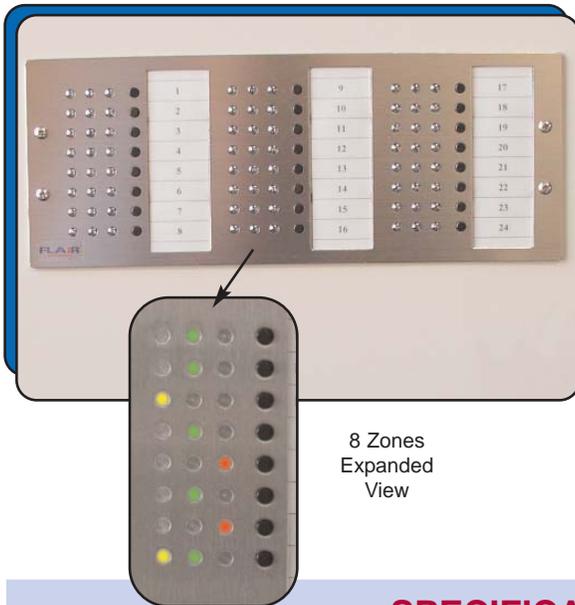

8 Zones  
Expanded  
View

## FEATURES:

- Simple, Highly Visual Display
- One Touch Zone Control
- Micro-Controller Based
- Fully Programmable with Free Software
- Monitor Closed, Open and Multi-State Circuits (High Security)
- Input to Output Mapping (Multiple Outputs per Zone)
- Interface with Standard Controls via Communication Bus
- Up to 32 Zones with more than 30 Options

## SPECIFICATIONS

<b>MOUNTING</b>	Recessed
<b>SIZE</b>	11" x 4 1/4" x 2 1/2"
<b>COLOR</b>	Stainless Steel Faceplate
<b>POWER</b>	Includes 12 VDC Power Supply Requires 110 VAC Input
<b>INPUTS</b>	Normally Closed, Normally Open or High Security Multi-Sate End-of-Line Resistor Loop (Color Coded)
<b>OUTPUTS</b>	One Open Collector Output per zone rated at 24 VDC, 100 mA (Color Coded)
<b>OTHER</b>	Four Auxiliary Control Inputs and 2 Common Zone Outputs may be programmed for a variety of functions



### Intrusion

Contacts, Motion Sensors, Panic Buttons, Cameras



### Nurse Call

Panic Buttons, Fall Sensors, Cameras



### Food Storage

Contacts, Temperature Sensors



### Flood

Water Sensors

## Accessories from Flair:

- Magnetic Contacts
- Fence Vibration Sensors
- Water Sensors
- Pagers · Dialers
- Remote Graphic Displays

## OPERATION:

*Simple, Visual, Intuitive .....*

Flair Multi-Zone Annunciators can be used as "stand alone" annunciators or network with other annunciators via communication module. Graphic Displays are also available. Each zone has a green LED for status, a red LED for alarm, a yellow LED for shunt and a zone control button for acknowledge, reset and bypass functions. Zone and common input and output type, timers and other features are programmable with easy to use free software.